



EATON DESK

BEFORE YOU START


- Assembly takes about 5 minutes
- 2 people recommended for assembly
- Assemble on a flat, soft surface (e.g. carpet or rug). If assembling on a hard surface, place some cardboard underneath to avoid scratching the melamine panels.
- When assembling or disassembling panels, only use a hand screwdriver. Cordless screwdrivers with high torque can damage the cam screws.

TOOLS REQUIRED


Phillips #2 Screwdriver

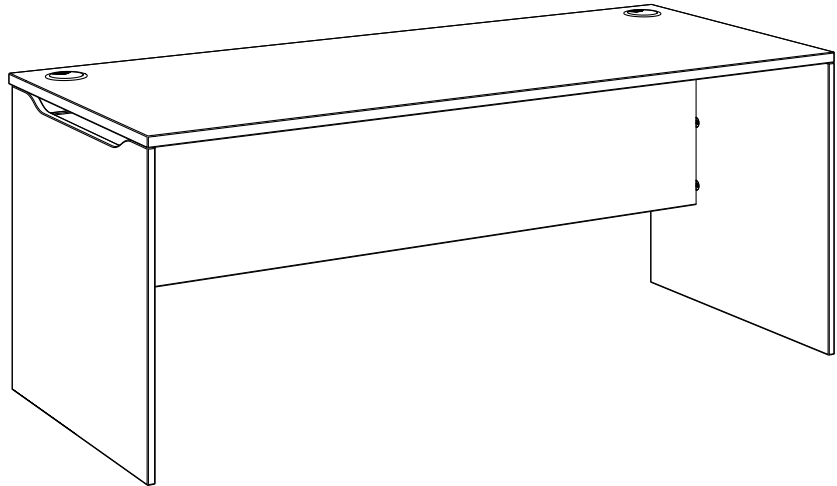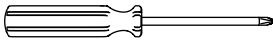


PARTS REFERENCE

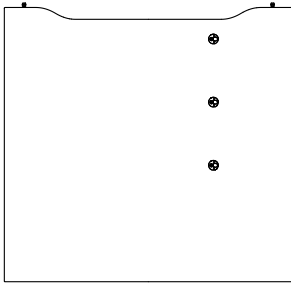


Left Side Panel

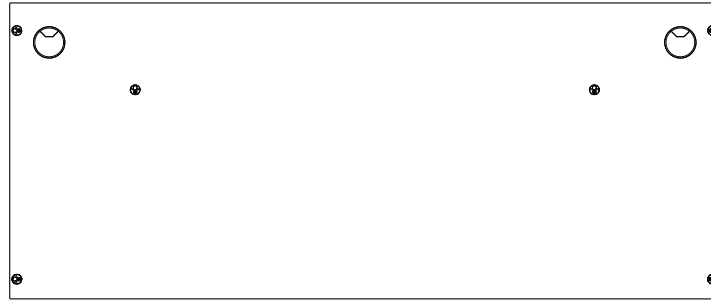

Top Panel

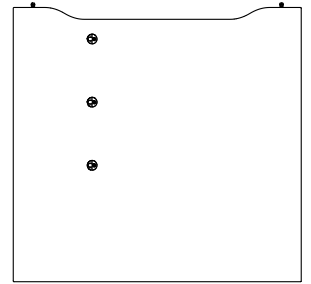


Right Side Panel

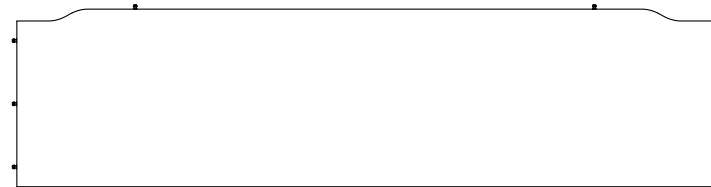


Modesty Panel

1

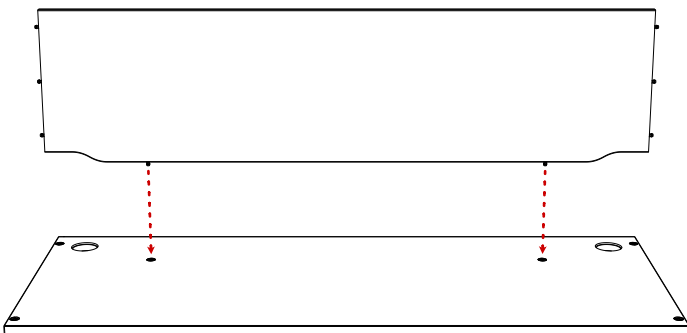

Place the top panel down first and fit the modesty panel.
Don't lock any cams yet.


2

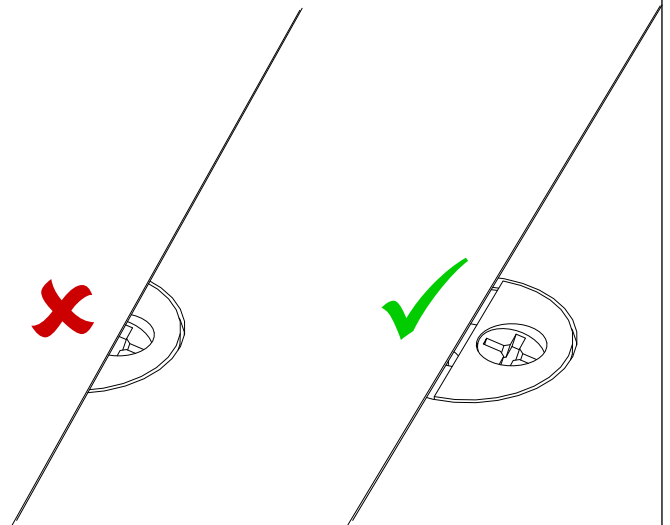

Check the cams to make sure the modesty panel is fitted correctly.


Cam screws should be clear and unobstructed.
If not, turn the modesty panel around and fit the opposite way.

3

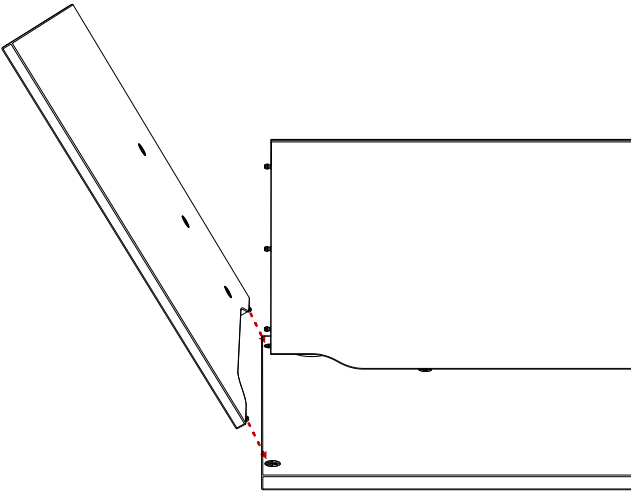


Fit the side panel into the top panel.
Hold it at an angle to avoid hitting the modesty panel.

4

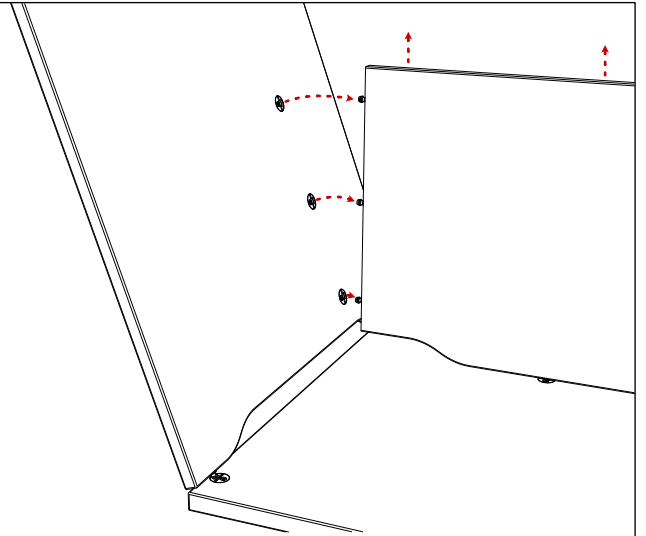

Bring the side panel upright to fit into the modesty panel.
You may need to lift the modesty panel slightly to make sure the pins line up with the cams in the side panel.
Be careful here, forcing the side panel without lining up the pins can damage the panel.


5

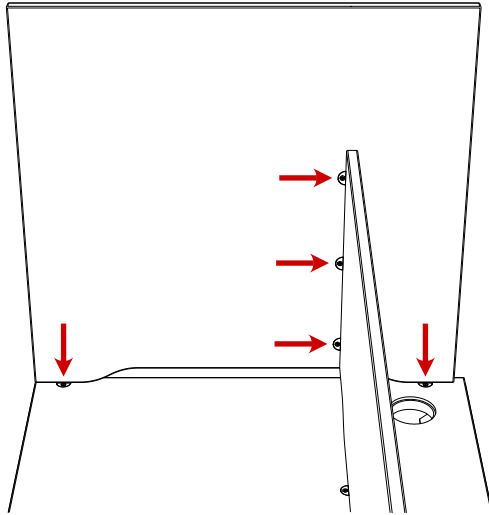

Make sure the side panel is fitted firmly into the top panel and modesty panel with no gaps, then lock the cams.
To lock, turn the cam screw clockwise about 3/4 turn until it stops.

Repeat steps 3 to 5 for the other side panel.

6

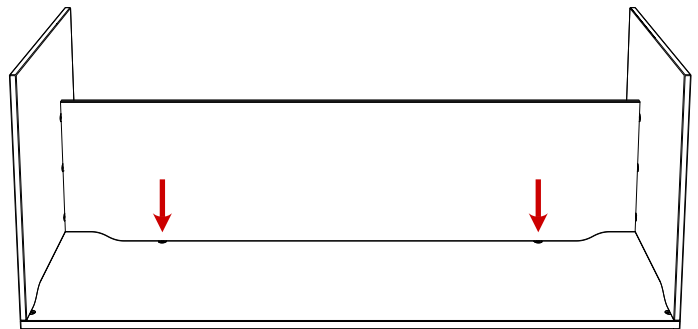

Finally, lock the cams to fasten the modesty panel.

(For disassembly, simply place the desk upside-down, unlock all the cams and pull the panels apart)